

**Note** Refer to the product documentation provided by your third-party vendor for application-specific access to the guest operating system that may apply to your product.

## Obtaining Console Access

For console access, perform the following steps:

### Enter application service mode

```
app-service application-name
```

### Execute /bin/console

**Prerequisite:** Obtain console access using the postinstall script.

Refer to [Application Extension Platform 1.x -- Enabling the Linux Shell in a Virtual Instance](#)

```
connect console
```

On initiating the command, /bin/console executes and allows third-party application commands to be used in the console shell. These commands allow a third-party application to cross connect to a CLI shell using its own binary console file or script. If the application does not provide a console file, the following message appears: Error Message Unable to start console

**Return to start of Getting Started Guide:** [Cisco AXP Getting Started Guide](#)