

**Table: Cisco AXP Command Modes**

Mode	Example
Cisco AXP EXEC mode	se-Module>
Cisco AXP configuration mode	se-Module> config t se-Module(config)>
Cisco AXP application service configuration mode	se-Module(config)> app-service helloworld se-Module(config-helloworld)>
Cisco AXP application service EXEC mode	se-Module> app-service helloworld se-Module(exec-helloworld)>

**Note:** To exit Cisco AXP EXEC mode and return to Cisco ISR privileged EXEC mode, enter the following command: `exit`

**Example:**

```
se-Module> exit
2800__axp#
```

**Return to start of Getting Started Guide:** [Cisco AXP Getting Started Guide](#)