

## Application\_Extension\_Platform\_1.x\_--\_Installing\_the\_Hardware

### **Prerequisites**

Before you install and configure software on the Cisco ISR and Cisco AXP service module, check that Cisco AXP is compatible with your Cisco ISR and service module. The hardware required is a Cisco Integrated Services Router (ISR or ISR-G2) and a Cisco AXP service module such as an ISM,SM, or SRE module.

Detailed hardware installation instructions are not shown on this page. Refer to the documentation for your specific model of router and service module. For example, search for your router or service module by first clicking *Products* on [www.cisco.com](http://www.cisco.com).

### **Additional References**

See routers and service modules in section *Platform-Specific Documents* in the [Cisco AXP Release Notes](#).

**Return to start of Getting Started Guide:** [Cisco AXP Getting Started Guide](#)