

## Application\_Extension\_Platform\_1.x\_--\_Viewing\_the\_Application\_Environment

To view the application environment, use the `show` command in Cisco AXP application service EXEC mode or Cisco AXP EXEC mode.

Use the `show software version` command to view the software versions installed on the service module.

For more information on `show` command usage, see the *Verifying and Troubleshooting* section in the Cisco AXP User Guide. See [Cisco AXP Configuration Guides](#).

**Return to start of Getting Started Guide:** [Cisco AXP Getting Started Guide](#)