

AXP Custom Search:

Cisco AXP Getting Started Guide

This guide describes the basic steps for installing and configuring Cisco Application Extension Platform (Cisco AXP) and how to package and install applications on Cisco AXP.

- [Contributing to the Wiki](#)
- [Documentation Roadmap](#)
- [Overview](#)
- [Installing the Hardware](#)
- [Installing the Software](#)
- [Configuring the Router](#)
- [Configuring the Cisco AXP Service Module](#)
- [Packaging Applications on Cisco AXP](#)
- [Installing and Uninstalling an Application](#)
- [Accessing the Guest Operating System](#)
- [Viewing the Application Environment](#)
- [Configuring Network Services](#)
- [Logging](#)
- [Cisco AXP Command Modes](#)
- [Example Configuration for Cisco 280x ISR and Cisco AXP Service Module](#)

Additional References

For details on configuration tasks and developing third-party applications, refer to the User or Developer Guide: [Configuration Guides](#)

To print the pages in this guide, see [AXP DocWiki Print Page](#)

For help on Mediawiki editing, see [http://meta.wikimedia.org/wiki/Help:Advanced editing](http://meta.wikimedia.org/wiki/Help:Advanced_editing)

For information on searching within the wiki, see [Contributing to the Wiki](#)

Return to [Cisco Application Extension Platform \(AXP\)](#)