

AAS - Multiple PIM – Multiple AAS Configuration

Problem Summary	<p>When more than one Peripheral Interface Manager (PIM) is configured with each having AAS enabled, follow these steps:</p> <ul style="list-style-type: none"> • All guidelines for AAS configuration in simplex mode must be followed for each AAS on each PIM. • Check if AAS corresponding to each PIM is coming up individually. You can do this by disabling all the other AAS except the one being checked.
Error Message	None.
Possible Cause	None.
Recommended Action	None.
Release	Release 7.5(1)
Associated CDETS #	None.