

Welcome to **Cisco DocWiki**. We encourage [registered Cisco.com users](#) to contribute to this wiki to improve Cisco product documentation. Note that you cannot log in to DocWiki with Cisco.com "guest" account credentials.

See [Terms of Use](#) and [About DocWiki](#) for more information about Cisco DocWiki.

Select the "edit" tab to edit an article or select the "discussion" tab to submit questions or comments about the article.

Click [here](#) to return to the Cisco ONS 15400 Series documentation on [www.cisco.com](http://www.cisco.com).

## Contents

- [1](#)  
[Audience](#)
- [2](#)  
[Organization](#)

## Audience

To use this publication, you should be familiar with Cisco or equivalent optical transmission hardware and cabling, telecommunications hardware and cabling, electronic circuitry and wiring practices, and preferably have experience as a telecommunications technician.

## Organization

This book is organized into the following sections:

[Preface](#)

[Install the Shelf and Backplane Cable](#)

[Install Cards and Fiber-Optic Cable](#)

[Connect the PC and Log into the GUI](#)

[Turn Up a Node](#)

[Turn Up a Network](#)

[Create Circuits and VT Tunnels](#)

[Manage Circuits](#)

[Manage Alarms](#)

Contents

Monitor Performance

Change Card Settings

Change Node Settings

Upgrade Cards and Spans

Convert Network Configurations

Add and Remove Nodes

Maintain the Node

Power Down the Node

DLPs A1 to A99

DLPs A100 to A199

DLPs A200 to A299

DLPs A300 to A399

DLPs A400 to A499

DLPs A500 to A599

CTC Information and Shortcuts