

Welcome to **Cisco DocWiki**. We encourage [registered Cisco.com users](#) to contribute to this wiki to improve Cisco product documentation. Note that you cannot log in to DocWiki with Cisco.com "guest" account credentials.

See [Terms of Use](#) and [About DocWiki](#) for more information about Cisco DocWiki.

Select the "edit" tab to edit an article or select the "discussion" tab to submit questions or comments about the article.

Click [here](#) to return to the Cisco ONS 15400 Series documentation on [www.cisco.com](http://www.cisco.com).

## Contents

- [1](#)  
[Audience](#)
- [2](#)  
[Organization](#)

## Audience

To use this publication, you should be familiar with Cisco or equivalent optical transmission hardware and cabling, telecommunications hardware and cabling, electronic circuitry and wiring practices, and preferably have experience as a telecommunications technician.

## Organization

This book is organized into the following sections:

[Preface](#)

[General Troubleshooting](#)

[Alarm Troubleshooting Introduction](#)

[Alarm Troubleshooting \(A through L\)](#)

[Alarm Troubleshooting \(M through W\)](#)

[Transient Conditions](#)

[Error Messages](#)