

Welcome to **Cisco DocWiki**. We encourage [registered Cisco.com users](#) to contribute to this wiki to improve Cisco product documentation. Note that you cannot log in to DocWiki with Cisco.com "guest" account credentials.

See [Terms of Use](#) and [About DocWiki](#) for more information about Cisco DocWiki.

Select the "edit" tab to edit an article or select the "discussion" tab to submit questions or comments about the article.

Click [here](#) to return to the Cisco ONS 15400 Series documentation on [www.cisco.com](http://www.cisco.com).

## Contents

- [1](#)  
[Audience](#)
- [2](#)  
[Organization](#)

## Audience

To use this publication, you should be familiar with Cisco or equivalent optical transmission hardware and cabling, telecommunications hardware and cabling, electronic circuitry and wiring practices, and preferably have experience as a telecommunications technician.

## Organization

This book is organized into the following sections:

[Preface](#)

[ACT Commands](#)

[ALW Commands](#)

[APPLY Commands](#)

[CANC Commands and Messages](#)

[CHG Commands](#)

[CLR Commands](#)

[CONN Commands](#)

[COPY Commands](#)

[DISC Commands](#)

Contents

DLT Commands

ED Commands

ENT Commands

EX Commands

INH Commands

INIT Commands

OPR Commands

REPT Messages

RLS Commands

RMV Commands

RST Commands

RTRV Commands (Numerics through C)

RTRV Commands (D through P)

RTRV Commands (Q through W)

SCHEM Commands

SET Commands

SW Commands

TST Commands

Access Identifiers

Conditions

Modifiers