

## Cisco Unified MeetingPlace, Release 6.x -- About Troubleshooting the System

Cisco Unified MeetingPlace, Release 6.x > Cisco Unified MeetingPlace Audio Server > Configuring > Troubleshooting the System Configuration

If you have a problem with your Cisco Unified MeetingPlace system, try the following troubleshooting tips first:

- Make sure all cards and transition modules are seated properly.
- Check all cables and connections.
- Verify the card configuration with the **blade** command.
- Verify the port configuration with the **port** command.
- Check the error log with the **errorlog** command.