

[Cisco Unified MeetingPlace, Release 6.x](#) > [Cisco Unified MeetingPlace Audio Server](#) > [Installing the hardware](#)

See also [Maintaining the Audio Server](#)

The following information describes how to maintain -- not repair -- the Cisco Unified MeetingPlace Audio Server system and contains the following sections:

- [Replacing the Filter in the Power Supply Unit Fan \(Cisco Unified MeetingPlace 8112 Only\)](#)
- [Enabling Server Disk Capacity Monitoring](#)

The following section describes how to repair a known problem with the CD and DVD drives for the Cisco Unified MeetingPlace 8112:

- [Replacing the CD or DVD Drive in the Cisco Unified MeetingPlace 8112](#)

(For additional information about repairing the Cisco Unified MeetingPlace Audio Server system, contact Cisco TAC. See [Obtaining Support](#).)