

[Cisco Unified MeetingPlace, Release 6.x](#) > [Cisco Unified MeetingPlace Audio Server](#) > [Installing the hardware](#)

Read the following safety warnings before you begin installing the Cisco Unified MeetingPlace Audio Server system. Translations of the warnings are available online in *Regulatory Compliance and Safety Information for Cisco MeetingPlace 8100 Series* at http://www.cisco.com/en/US/products/sw/ps5664/ps5669/prod_installation_guides_list.html.

Warning! To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.

Statement 1006

Warning! Do not work on the system or connect or disconnect cables during periods of lightning activity. Statement 1001

Warning! This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security. Statement 1017

Warning! To avoid electric shock, do not connect safety extra-low voltage (SELV) circuits to telephone-network voltage (TNV) circuits. LAN ports contain SELV circuits, and WAN ports contain TNV circuits. Some LAN and WAN ports both use RJ-45 connectors. Use caution when connecting cables. Statement 1021

Warning! Before working on a chassis or working near power supplies, unplug the power cord on AC units. Statement 12

Warning! The plug-socket combination must be accessible at all times, because it serves as the main disconnecting device. Statement 1019

Warning! This product requires short-circuit (overcurrent) protection, to be provided as part of the building installation. Install only in accordance with national and local wiring regulations. Statement 1045

Warning! Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing. Statement 1034

Warning! Blank faceplates and cover panels serve three important functions: they prevent exposure to hazardous voltages and currents inside the chassis; they contain electromagnetic interference (EMI) that might disrupt other equipment; and they direct the flow of cooling air through the chassis. Do not operate the system unless all cards, faceplates, front covers, and rear covers are in place. Statement 1029

Warning! Class 1 laser product. Statement 1008

Warning! Do not stare into the beam or view it directly with optical instruments. Statement 1011

Warning! Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations. Statement 1036

Warning! Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface. Statement 1037

Warning! Use caution when installing or modifying telephone lines. Statement 177

Warning! This equipment must be grounded. Never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available. Statement 1024