

[Cisco Unified MeetingPlace, Release 6.x](#) > [Cisco Unified MeetingPlace Audio Server](#) > [Configuring](#) > [Command-Line Interface Reference](#)

Table: Technician Commands at a Glance provides a brief explanation of the CLI commands available to technicians.

**Table: Technician Commands at a Glance**

Command	Short Description	Details
<b>acard</b>	Views or modifies an analog line card record.	<a href="#">acard</a>
<b>activity</b>	Shows a summary of port activity.	<a href="#">activity</a>
<b>alarm</b>	Shows the contents of the Cisco Unified MeetingPlace system alarm table.	<a href="#">alarm</a>
<b>alarmtest</b>	Generates a test alarm condition.	<a href="#">alarmtest</a>
<b>blade</b>	Configures all T1, E1, and IP ports.	<a href="#">blade</a>
<b>chkbcast</b>	Shows Cisco Unified MeetingPlace broadcasts per second.	<a href="#">chkbcast</a>
<b>clear</b>	Clears the screen.	<a href="#">clear</a>
<b>clearalarm</b>	Clears the contents of the alarm table.	<a href="#">clearalarm</a>
<b>cmdbcheck</b>	Checks database consistency.	<a href="#">cmdbcheck</a>
<b>configdiskcap</b>	Configures the file system threshold capacity.	<a href="#">configdiskcap</a>
<b>cptrace</b>	Lists the call processing trace log.	<a href="#">cptrace</a>
<b>date</b>	Shows or sets the Cisco Unified MeetingPlace system date and time.	<a href="#">date</a>
<b>dbsize</b>	Shows the number of database records.	<a href="#">dbsize</a>
<b>dcard</b>	Views or modifies a Smart Blade beyond the capabilities of the <b>blade</b> command.	<a href="#">dcard</a>
<b>down</b>	Shuts down Cisco Unified MeetingPlace leaving the CLI active.	<a href="#">down</a>
<b>downblade</b>	Brings down a blade.	<a href="#">downblade</a>
<b>download</b>	Initiates a software update from the network or modem.	<a href="#">download</a>
<b>e1card</b>	Views or modifies a Multi Access Blade record.	<a href="#">e1card</a>
<b>e1span</b>	Views or modifies an E1 span record.	<a href="#">e1span</a>
<b>errorlog</b>	Lists the exception log.	<a href="#">errorlog</a>
<b>exc</b>	Prints information about an exception code.	<a href="#">exc</a>
<b>exit</b>	Logs out of the Cisco Unified MeetingPlace system.	<a href="#">exit</a>
<b>getether</b>	Shows the Cisco Unified MeetingPlace Audio Server Ethernet address.	<a href="#">getether</a>
<b>gwcmttrace</b>	Views a gateway unit's altlog.	<a href="#">gwcmttrace</a>
<b>gwcptrace</b>	Displays the Cisco Unified MeetingPlace Gateway SIM event log.	<a href="#">gwcptrace</a>
<b>gwntrtrace</b>	Views a gateway unit's NT event log.	<a href="#">gwntrtrace</a>
<b>gwstart</b>	Starts a gateway.	<a href="#">gwstart</a>
<b>gwstatus</b>	Displays the status of all connected Cisco Unified MeetingPlace gateways and their services.	<a href="#">gwstatus</a>
<b>gwstop</b>	Stops a gateway.	<a href="#">gwstop</a>

## Cisco\_Unified\_MeetingPlace,\_Release\_6.x\_--\_Technician\_Commands\_at\_a\_Glance

<b>halt</b>	Shuts down and halts Cisco Unified MeetingPlace.	<u>halt</u>
<b>help</b>	Displays help information.	<u>help</u>
<b>hwconfig</b>	Displays the current hardware configuration.	<u>hwconfig</u>
<b>license</b>	Shows copyright and license information.	<u>license</u>
<b>makeconfuk</b>	Sets the language for all conferences to UK English.	<u>makeconfuk</u>
<b>mtginfo</b>	Provides information about a specific meeting ID at a specific time.	<u>mtginfo</u>
<b>net</b>	Views or modifies the network configuration.	<u>net</u>
<b>ntpstatus</b>	Shows the status of the Network Time Protocol.	<u>ntpstatus</u>
<b>passwd</b>	Changes the technician's password.	<u>passwd</u>
<b>persmtgmode</b>	Changes personal meeting mode parameters.	<u>persmtgmode</u>
<b>ping</b>	Tests network connectivity.	<u>ping</u>
<b>port</b>	Views or modifies a port or port group record.	<u>port</u>
<b>portstat</b>	Shows the current port active and inactive status, the port group assignment, and port and card mapping.	<u>portstat</u>
<b>protparm</b>	Views or modifies the protocol parameter table.	<u>protparm</u>
<b>recover</b>	Fixes corrupted database structures and forces database and voice file system consistency.	<u>recover</u>
<b>release</b>	Shows the Cisco Unified MeetingPlace Audio Server software release number.	<u>release</u>
<b>resize</b>	Resets the terminal settings to your screen size.	<u>resize</u>
<b>restart</b>	Shuts down and reboots Cisco Unified MeetingPlace.	<u>restart</u>
<b>restore</b>	Restores the database from tape.	<u>restore</u>
<b>restore_vp_db</b>	Restores a conference server database from a network server.	<u>restore_vp_db</u>
<b>revert</b>	Activates the previous configuration.	<u>revert</u>
<b>rlogin</b>	Logs in to another server.	<u>rlogin</u>
<b>save</b>	Saves the current configuration.	<u>save</u>
<b>savelicense</b>	Saves the software license keys to a floppy disk.	<u>savelicense</u>
<b>setconfigflag</b>	Manages an option flag used with multiserver meetings.	<u>setconfigflag</u>
<b>setipcodec</b>	Sets IP codec configuration.	<u>setipcodec</u>
<b>setmsmparams</b>	Manages retry and timeout settings for multiserver meetings.	<u>setmsmparams</u>
<b>setsilrem</b>	Manages silence removal on the Cisco Unified MeetingPlace Audio Server.	<u>setsilrem</u>
<b>setsn</b>	Sets or displays the Cisco Unified MeetingPlace system serial number.	<u>setipcodec</u>
<b>setup</b>	Sets the basic Cisco Unified MeetingPlace Audio Server configuration.	<u>setup</u>
<b>span</b>	Views or modifies a T1 CAS span record.	<u>span</u>
<b>spanstat</b>	Views the status of T1 or E1 spans.	<u>spanstat</u>
<b>stty</b>	Sets terminal characteristics.	<u>stty</u>
<b>swcheck</b>	Verifies the software file checksums.	<u>swcheck</u>
<b>swstatus</b>	Shows the software status.	<u>swstatus</u>
<b>sysconfig</b>	Shows the current Cisco Unified MeetingPlace system database disk configuration.	<u>sysconfig</u>
<b>timeadjust</b>	Adjusts the Cisco Unified MeetingPlace system time.	<u>timeadjust</u>
<b>timezone</b>	Sets the Cisco Unified MeetingPlace system local time zone.	<u>timezone</u>
<b>tset</b>	Initializes the software settings for your terminal.	<u>tset</u>

## Cisco\_Unified\_MeetingPlace,\_Release\_6.x\_--\_Technician\_Commands\_at\_a\_Glance

<b>tvportstat</b>	Views the status of IP ports.	<u>tvportstat</u>
<b>update</b>	Runs a software update.	<u>tvportstat</u>
<b>updatedbsize</b>	Updates the database size.	<u>updatedbsize</u>
<b>userinfo</b>	Displays information about a profiled Cisco Unified MeetingPlace user.	<u>userinfo</u>
<b>who</b>	Shows you who else is logged in to Cisco Unified MeetingPlace.	<u>who</u>
<b>wswho</b>	Shows a list of workstation logins.	<u>wswho</u>
<b>xresize</b>	Resets the x-term settings to your screen size.	<u>xresize</u>