

**Main page:** [Cisco Unified MeetingPlace, Release 7.0](#)

**Up one level:** [Configuration](#)

This module describes how to change Application Server passwords for the administrator:

- [Changing the Passwords for the admin Profile](#)
- [Changing the Password for the root or mpadmin Account](#)

#### **Related Topics**

- For the Media Server Administration password, see [Changing the Media Server Administration Password](#).
- For passwords for the audio and video blade, see [Changing the Password for an Installed Blade](#).
- For the Windows Media Server password, see [Installing Windows Media Server for Cisco Unified MeetingPlace](#).
- For the SQL password, see [How to Change and Apply a New SQL Password to Cisco Unified MeetingPlace Web Conferencing](#).
- For the Web Server shared storage directory password, see [Configuring Shared Storage](#).