

**Main page:** [Cisco Unified MeetingPlace, Release 7.0](#)

**Up one level:** [Integration](#)

We recommend that you do the following:

- Create a SIP trunk security profile in Cisco Unified Communications Manager specifically for Cisco Unified MeetingPlace.
- Apply this SIP trunk security profile to SIP trunks to Cisco Unified MeetingPlace systems.

## Contents

- [1 Before You Begin](#)
- [2 Procedure](#)
- [3 Table: Table 1 Fields for SIP Trunk Security Profile Configuration](#)
- [4 Related Topics](#)

### Before You Begin

- This task applies only in Cisco Unified Communications Manager environments.
- You perform this task in the Cisco Unified Communications Manager Administration pages. Because the pages and menus vary by release, you should check the Cisco Unified Communications Manager online help for step-by-step instructions for your specific release.

### Procedure

1. Go to **http://<ccm-server>/**, where <ccm-server> is the fully-qualified domain name or IP address of the Cisco Unified Communications Manager server.
2. Log in with your Cisco Unified Communications Manager administrator username and password.
3. Click **System > Security Profile > SIP Trunk Security Profile**.
4. Click **Add New**.
5. Configure fields described in [Table: Fields for SIP Trunk Security Profile Configuration](#).

**Table: Table 1 Fields for SIP Trunk Security Profile Configuration**

Field	Action
Name	Enter a name, such as SIP Trunk Security Profile for Cisco Unified MeetingPlace.
Device Security Mode	Select <b>Non Secure</b> .
	Keep the default value of <b>TCP+UDP</b> .

Incoming Transport Type	If other values are available for this field, you may instead select the value that matches the transport setting for this Cisco Unified Communications Manager node on the SIP Configuration Page.
Outgoing Transport Type	We recommend that you select <b>UDP</b> .
Enable Digest Authentication	<b>Uncheck</b> this check box.
Enable Application Level Authorization	<b>Uncheck</b> this check box.
Incoming Port	Make sure that this value matches the port setting for this Cisco Unified Communications Manager node on the SIP Configuration Page.  Default: 5060

6. Click **Save**.

**Related Topics**

- [Configuring Call Control for Cisco Unified MeetingPlace](#)
- [Configuring Reservationless Single Number Access \(RSNA\) for Cisco Unified MeetingPlace](#)
- Security Guide for your release of Cisco Unified Communications Manager at [http://www.cisco.com/en/US/products/sw/voicesw/ps556/prod\\_maintenance\\_guides\\_list.html](http://www.cisco.com/en/US/products/sw/voicesw/ps556/prod_maintenance_guides_list.html)