

**Main page:** [Cisco Unified MeetingPlace, Release 7.0](#)

**Up one level:** [Reference Information](#) or [Configuration](#)

By default, the auto attend feature is disabled. We recommend that you enable this feature for all users.

#### Before You Begin

- Complete [Adding or Editing an Auto Attend Translation Rule](#).
- For each user profile in which the auto attend feature is enabled, *anyone* who calls Cisco Unified MeetingPlace from a phone number configured in the [Main phone number](#) or [Alternate phone number](#) field will be logged in using that particular user profile.

Therefore, you may want to require profile passwords or disable the auto attend feature for users whose specified endpoints may be used by multiple people.

#### Procedure

1. Log in to the Administration Center.
2. Click **User Configuration**.
3. Click **User Groups** or **User Profiles**.
4. Configure these fields:
  - ◆ [Auto attend mode](#)
  - ◆ [Auto attend requires profile password](#)
5. Click **Save**.
6. Repeat this task for all user groups and user profiles for which you want to enable the auto attend feature.

#### Related Topics

- [Table: Field Reference: Add User Profile Page and Edit User Profile Page](#)
- [Auto Attend Feature](#)