

Main page: [Cisco Unified MeetingPlace, Release 7.0](#)

Up one level: [Configuration](#)

Before You Begin

This procedure is completed on the Cisco Unified MeetingPlace Web Server.

Procedure

1. Go to your system tray.
2. Right-click the **Cisco Unified MeetingPlace** icon.
Tip: The Cisco Unified MeetingPlace icon resembles a red door.
3. Select **Properties**.

Related Topics

- [Configuring the Gateway SIM](#)
- [Updating SQL Account Access from the MeetingPlace Gateway Configurations Utility](#)