

**Main page:** [Cisco Unified MeetingPlace, Release 7.0](#)

**Up one level:** [Reference Information](#) or [Configuration](#)

- Learn the benefits and restrictions of each supported call-control deployment option, and choose the best option for your Cisco Unified MeetingPlace system. Understand your deployment so that you know ahead of time which call-control devices you need to configure. See [Planning Your Deployment](#).
- Verify that the versions of your call-control devices and Cisco Unified MeetingPlace are compatible. See [System Requirements](#).
- Install the call-control devices as described in the installation documentation for those devices.
- Verify that the Cisco Unified IP Phones and other endpoints are connected and added to the database of your call-control devices.
- Verify that you can place and receive internal and external calls on the Cisco Unified IP Phones and other endpoints.
- Install Cisco Unified MeetingPlace as described in [Installing Cisco Unified MeetingPlace, Release 7.0](#).

#### **Related Topics**

- [Configuring Access Phone Numbers and Notification Labels](#) module
- [Configuring Direct Inward Dial for Cisco Unified MeetingPlace](#) module