

**Main page:** [Cisco Unified MeetingPlace, Release 7.0](#)

**Up one level:** [Configuration](#)

This module describes how to quickly configure your Cisco Unified MeetingPlace system for basic voice and video conferencing. Advanced configuration instructions are available in the other topics in this guide.

- [Configuring Basic Voice & Video Conferencing](#)
- [Verifying Basic Voice and Video Conferencing Using the Telephone User Interface](#)
- [Verifying Basic Voice and Video Conferencing Using the End-User Web Interface](#)