

**Main page:** [Cisco Unified MeetingPlace, Release 7.0](#)

**Up one level:** [Reference Information](#)

Use these specifications when importing data to Cisco Unified MeetingPlace or exporting data from Cisco Unified MeetingPlace to a spreadsheet or database program:

- [User Groups-Raw Data Export and Import Specifications](#)
- [User Profiles-Raw Data Export and Import Specifications](#)
- [Video Terminal Profiles-Raw Data Export and Import Specifications](#)
- [Meetings-Raw Data Export and Import Specifications](#)
- [Outgoing Calls Information-Raw Data Export Specifications](#)
- [Meeting Participant Information-Raw Data Export Specifications](#)
- [Meeting Participant Join Leave Information-Raw Data Export Specifications](#)
- [Scheduling Failures Information-Raw Data Export Specifications](#)
- [Scheduling Statistics Information-Raw Data Export Specifications](#)
- [Scheduling Activity By User Information-Raw Data Export Specifications](#)
- [Continuous Meetings Information-Raw Data Export Specifications](#)