

**Main page:** [Cisco Unified MeetingPlace, Release 7.0](#)

**Up one level:** [Reference Information](#)

To find this page, click **Services > System Status**, and click **View Status**.

**Table: Field Reference: System Status Details Page**

Field	Description
<b>General</b>	
System mode	The current loading status of the Cisco Unified MeetingPlace software. One of the following: up, down, shutting down, loading, coming up, and unloaded.
Temperature	The temperature (in degrees Celsius) as measured on the MSC card inside the cabinet. <b>Note:</b> Until the Cisco Unified MeetingPlace system is up, the temperature reads "Unknown." Once the system is up, the temperature reads correctly.
Power supply	Displays either "OK" or displays a count of the times the voltage was out of tolerance.
<b>Server Information</b>	
Server name	The name of the server.
Unit	Always set to 0 to identify the Application Server.
Class	The class name.
Mailbox	The number of the mailbox. This is a hexadecimal number.
<b>Mailbox Information</b>	
Mailbox name	The name of the mailbox.
Unit	This is always set to 0.
Mailbox	The number of the mailbox. This is a hexadecimal number.
Messages	<i>For internal use only.</i>
<b>Connection Information</b>	
Conn ID	<i>For internal use only.</i>
Unit	This is always set to 0.
Creator MB	<i>For internal use only.</i>
<b>Module Information</b>	
Module name	The name of the software module.
CLS	The number of the software module.  See <a href="#">Module Numbers</a> .
Status	Status of the module. One of the following: up, down, starting, going down, exiting, or gone.
PID	<i>For internal use only.</i>

UID	Username used to log in to Cisco Unified MeetingPlace from a workstation (not from a phone).
Exit	<i>For internal use only.</i>
<b>Unit Information</b>	
Unit	<i>For internal use only.</i>
Site	<i>For internal use only.</i>
Status	<i>For internal use only.</i>
Run level	<i>For internal use only.</i>
Unit kind	<i>For internal use only.</i>
Last attach	<i>For internal use only.</i>
<b>CPU Information</b>	
CPU usage	<i>For internal use only.</i>

**Related Topics**

- [Viewing the Current Status of the System in the Administration Center](#)