

Main page: [Cisco Unified MeetingPlace, Release 7.0](#)

Up one level: [Configuration](#)

You can see meetings in progress by going to the following URL:

http://<address of the Audio Blade>/cc/McuV600_60/defaultOp.asp

This lets you see all of the participants in the meeting and their associated audio and video codec information.