

**Main page:** [Cisco Unified MeetingPlace, Release 7.1](#)

**Up one page:** [Installation](#)

## Contents

- [1 Testing the Basic Installation](#)
  - ◆ [1.1 Procedure](#)
- [2 Validating the Ethernet Connection](#)
  - ◆ [2.1 Procedure](#)

## Testing the Basic Installation

After installing the Application Server, the system reboots and automatically displays the operating system log-in page.

### Procedure

1. Go to the operating system log-in page.
2. Log in as the user called **mpadmin**.
3. Enter the password associated with this username.  
The system displays the operating system desktop.
4. Choose **Application > Internet > Firefox Web Browser** to go to the Internet.
5. Enter the hostname (FQDN) for the system.  
The system displays the Cisco Unified MeetingPlace Administration Center log-in page.

## Validating the Ethernet Connection

Follow this procedure to ensure that the Application Server is properly connected to the network.

### Procedure

1. Go to the operating system login page.
2. Log in as the user called **root**.
3. Enter the password associated with this username.  
The system displays the operating system desktop.
4. Choose **Application > System Tools > Terminal**.  
The system displays the command line.
5. Enter **ethtool eth0** to see the Ethernet port status.  
The system displays a status of the network.
6. Ensure that the "link detected" parameter at the bottom says **yes**.  
**Note:** If it says no, the Application Server is not connected to the network. Contact your network administrator to determine why it is not connected to the network.