

**Main page:** [Cisco Unified MeetingPlace Express, Release 2.x](#)

**Previous page:** [Page References](#)

The Call Configuration page leads to other pages with the options listed in the following table:

**Table: Call Configuration Area Options and Pages**

| Options                                                                                                                               | Administration Center Pages                                                                                                                                         |
|---------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <a href="#">Configuring Call-Control Integration for Cisco Unified MeetingPlace Express with Cisco Unified Communications Manager</a> | <ul style="list-style-type: none"><li>• <a href="#">Field Reference: H.323 Configuration</a></li><li>• <a href="#">Field Reference: SIP Configuration</a></li></ul> |
| <a href="#">Configuring Direct Meeting Dial-In</a>                                                                                    | <ul style="list-style-type: none"><li>• <a href="#">Field Reference: Dial Configuration</a></li></ul>                                                               |
| <a href="#">Configuring Parameters that Affect Sound Quality</a>                                                                      | <ul style="list-style-type: none"><li>• <a href="#">About This Page: Auto Attend Translation Configuration</a></li></ul>                                            |