

Main page: [Cisco Unified MeetingPlace Express, Release 2.x](#)

Previous page: [Page References](#)

This page is used to export information about outgoing calls that were made from Cisco Unified MeetingPlace Express during a specified range of dates. Topics in this section include:

- [Field Reference: Outgoing Calls Information](#)
- [Output Fields of the Outgoing Calls Information Page](#)

Contents

- [1 Field Reference: Outgoing Calls Information](#)
 - ◆ [1.1 Table: Fields on the Outgoing Calls Information Page](#)
- [2 Output Fields of the Outgoing Calls Information Page](#)
 - ◆ [2.1 Table: Output Fields of the Outgoing Calls Information Page](#)

Field Reference: Outgoing Calls Information

Table: Fields on the Outgoing Calls Information Page

Field	Description	Value
Destination	Destination of the exported information. For descriptions, restrictions, and recommendations for each option, see the How To Export Data .	Screen/File/Printer Default: Screen
Include field header names	Whether or not to include the field header names in the exported file.	No/Yes Default: Yes
Start date	Earliest date for which you want to export meeting dial-out information.	Format: mm/dd/yyyy Default: yesterday's date
End date	Latest date for which you want to export meeting dial-out information.	Format: mm/dd/yyyy Default: today's date

Output Fields of the Outgoing Calls Information Page

Table: Output Fields of the Outgoing Calls Information Page

Field	Description
StartTimeOfCall	The date and time when the call started.
uid	See uid .
ConfNum	See ConfNum .
nSeconds	The duration of the outgoing call, in seconds.
CalledDest	The telephone number that was called.
fBlastOutdial	Whether this was a blast dial-out call.
UpdateTime	The date and time when the call was updated.
partID	Unique number that identifies the person who is being called from within a meeting.