

**Main page:** [Cisco Unified MeetingPlace Express, Release 2.x](#)

The content in this chapter applies only to Cisco Unified MeetingPlace Express (which is used for scheduled and reservationless voice, web, and video conferencing) and *not* to Cisco Unified MeetingPlace Express VT (which is used for ad hoc meetings).

**Note:** The names for Cisco Unified CallManager Release 4.3, Release 5.1, and Release 6.0 have been changed to Cisco Unified Communications Manager Release 4.3, Release 5.1, and Release 6.0. The names of Cisco Unified CallManager Release 4.0, Release 4.1, Release 4.2, and Release 5.0 have *not* changed and remain the same.

This chapter describes how to integrate your system with specific call-control devices that can route calls to and from Cisco Unified MeetingPlace Express.

- [Integrating With Cisco Unified Communications Manager](#)
- [How to Configure Cisco Unified Communications Manager Integration Without a Gatekeeper](#)
- [How to Configure Cisco Unified MeetingPlace Express Phone View](#)
- [How to Configure User Authentication By an External Directory](#)