

**Main page:** [Cisco Unified MeetingPlace Express, Release 2.x](#)

**Previous page:** [Page References](#)

This page is used to display, delete, and export alarms in the Cisco Unified MeetingPlace Express system.

<b>Field</b>	<b>Description</b>
Severity	Magnitude of the alarm. Can be major or minor.
Code	A number associated with this alarm.
Count	The number of times that the error occurred that triggered the alarm.
First Time	The first time that the error occurred that triggered the alarm.
Last Time	The most recent time that the error occurred that triggered the alarm.
Unit	This is always set to 0.
Software Module	The specific Cisco Unified MeetingPlace Express software module. Used for software faults only.

**Related Topics**

- [Viewing, Deleting, and Exporting Alarms](#)