

**Main page:** [Cisco Unified MeetingPlace Express, Release 2.x](#)

**Previous page:** [Page References](#)

This page is used to connect Cisco Unified MeetingPlace Express to a call-control device, such as Cisco Unified Communications Manager or Cisco Unified CallManager.

**Table: Fields on the Dial Configuration Page**

Field	Description	Value
<b>Outdials</b>		
Outdials	Whether dial-out calls use H.323 or SIP.	H.323/SIP Default: H.323
Save	Saves the dial-out settings.	-
<b>Direct Meeting Dial-in</b>		
edit	Opens the Dial Configuration Details page, from which you can create or edit the dialing group.	-
Delete Selected	Deletes the dialing groups with checked check boxes.	-
Cancel	Exits the page without saving any changes.	-