

**Main page:** [Cisco Unified MeetingPlace Express, Release 2.x](#)

**Previous page:** [Page References](#)

This page is used to connect Cisco Unified MeetingPlace Express to a call-control device such as Cisco Unified Communications Manager.

**Table: Fields on the H.323 Configuration Page**

Field	Description	Value
H.323 enabled	<p>Whether H.323 is enabled.</p> <p>Note the following:</p> <ul style="list-style-type: none"> <li>• If this field is set to <b>No</b>, incoming H.323 calls cannot be received.</li> <li>• It takes about one minute to bring up the service after enabling H.323. While the H.323 service is coming up, H.323 calls will not work.</li> <li>• To use H.323 for outgoing calls, see the <a href="#">Field Reference: Dial Configuration</a>.</li> </ul>	<p>Yes/No</p> <p>Default: Yes</p>
E.164 address	<p>Phone number of the Cisco Unified MeetingPlace Express server.</p> <p>If Cisco Unified MeetingPlace Express uses H.323 to dial out to a Cisco Unified IP Phone, this number appears on the Cisco Unified IP Phone screen.</p> <p>This field must match the phone number configured in the call-control device to route calls to Cisco Unified MeetingPlace Express.</p>	<p>Up to 24 digits</p> <p>Default: 0000</p>
H.323 ID	<p>Alias used to identify the Cisco Unified MeetingPlace Express server as an H.323 endpoint.</p> <p>If a user calls Cisco Unified MeetingPlace Express from a Cisco Unified IP Phone, the H.323 ID appears on the Cisco Unified IP Phone screen.</p> <p>Restriction: Do not leave this field blank.</p>	<p>Up to 128 characters</p> <p>Default: Cisco Unified MeetingPlace Express</p>
Local H.323 port	TCP or UDP port used for incoming H.323 calls to Cisco Unified MeetingPlace Express.	<p>1720 (Do not modify)</p> <p>Default: 1720</p>

	<p>Restriction: This field must be set to TCP port 1720.</p> <p>The following port settings are automatically configured on Cisco Unified MeetingPlace Express and cannot be modified:</p> <ul style="list-style-type: none"> <li>• UDP port 1719 is used for Registration Admission Status (RAS) signaling to a gatekeeper.</li> <li>• TCP port 1720 is used for outgoing H.323 calls from Cisco Unified MeetingPlace Express.</li> </ul>	
Use gatekeeper	<p>Whether to use a gatekeeper, which can be used for address resolution, call routing, and bandwidth control.</p> <p>For Cisco Unified Communications Manager or Cisco Unified CallManager integration, this field must be set to <b>No</b>.</p>	<p>Yes/No</p> <p>Default: No</p>
Gatekeeper	<p>Gatekeeper IP address. Enter the decimal value of one octet in each field.</p> <p><b>Note:</b> If you select <b>No</b> for the <u>Use gatekeeper</u> field, these fields are inactive.</p>	<p>Range: 0 to 255</p> <p>Default: 0</p>
H.323 gateway 1	<p>IP address of the H.323 gateway, which connects the IP network with the public switched telephone network (PSTN).</p> <p>Enter the decimal value of one octet in each field.</p> <p>For Cisco Unified Communications Manager or Cisco Unified CallManager integration, this field must contain the IP address of the Cisco Unified Communications Manager or Cisco Unified CallManager server.</p>	<p>Range: 0 to 255</p> <p>Default: 0</p>
H.323 gateway 2		
H.323 gateway 3	<p>IP address of an optional failover H.323 gateway.</p>	<p>Range: 0 to 255</p>
H.323 gateway 4	<p>Enter the decimal value of one octet in each field.</p>	<p>Default: 0</p>
H.323 gateway 5		