

**Main page:** [Cisco Unified MeetingPlace Express, Release 2.x](#)

**Previous page:** [Page References](#)

This page is used to install new or incremental licenses.

**Table: Fields on the Install Licenses Page**

Field	Description	Values
Upload new license file	Specifies to delete all previously installed licenses before installing the license file.  Restriction: Select this option only when uploading licenses to your system for the first time, or in the unlikely event that you must install an entirely new set of licenses.	-
Append incremental license file	Specifies to keep all the previously installed licenses and to add additional licenses from the license file.	-
Host ID (MAC address)	(Read only) MAC address of the server.  Use the value in this field to obtain licenses. See the <a href="#">How To Install and Manage Licenses</a> .	-
License file to use	Directory path and filename of the license file.	To locate the file, click <b>Browse</b> .