

Main page: [Cisco Unified MeetingPlace Express, Release 2.x](#)

Previous page: [Page References](#)

This page is used to set up, enable, and disable SMA and to test the SMA status on your system.

Table: Fields on the SMA Host Configuration Page

Field	Description	Value
SMA status	(Read only) Whether SMA is enabled or disabled for this system.	-
Host name (address)	Domain name of the secondary (external) server.	any text Default: blank
Password for mpxadmin user	The password for the mpxadmin user on the system entered above.	any text Default: blank