

Main page: [Cisco Unified MeetingPlace Express, Release 2.x](#)

Previous page: [Page References](#)

Field	Description
General	
System mode	The current loading status of the Cisco Unified MeetingPlace Express software. One of the following: up, down, shutting down, loading, coming up, and unloaded.
Temperature	The temperature (in degrees Celsius) as measured on the MSC card inside the cabinet. Note: Until the Cisco Unified MeetingPlace Express system is up, the temperature reads "Unknown." Once the system is up, the temperature reads correctly.
Power supply	Displays either "OK" or displays a count of the times the voltage was out of tolerance.
Server Information	
Server name	The name of the server.
Unit	This is always set to 0.
Class	The class name.
Mailbox	The number of the mailbox. This is a hexadecimal number.
Mailbox Information	
Mailbox name	The name of the mailbox.
Unit	This is always set to 0.
Mailbox	The number of the mailbox. This is a hexadecimal number.
Messages	<i>For internal use only.</i>
Connection Information	
Conn ID	<i>For internal use only.</i>
Unit	This is always set to 0.
Creator MB	<i>For internal use only.</i>
Module Information	
Module name	The name of the software module.
CLS	<i>For internal use only.</i>
Status	Status of the module. One of the following: up, down, starting, going down, exiting, or gone.
PID	<i>For internal use only.</i>
UID	Username used to log in to Cisco Unified MeetingPlace Express from a workstation (not from a phone).
Exit	<i>For internal use only.</i>
Unit Information	
Unit	<i>For internal use only.</i>
Site	<i>For internal use only.</i>

Status	<i>For internal use only.</i>
Run level	<i>For internal use only.</i>
Unit kind	<i>For internal use only.</i>
Last attach	<i>For internal use only.</i>
CPU Information	
CPU usage	<i>For internal use only.</i>

Related Topics

- [Viewing the Current Status of the System](#)