

Main page: [Cisco Unified MeetingPlace Express, Release 2.x](#)

Previous page: [Page References](#)

| Field | Description |
|-------------------------------|--|
| General | |
| System mode | The current loading status of the Cisco Unified MeetingPlace Express software. One of the following: up, down, shutting down, loading, coming up, and unloaded. |
| Temperature | The temperature (in degrees Celsius) as measured on the MSC card inside the cabinet. Note: Until the Cisco Unified MeetingPlace Express system is up, the temperature reads "Unknown." Once the system is up, the temperature reads correctly. |
| Power supply | Displays either "OK" or displays a count of the times the voltage was out of tolerance. |
| Server Information | |
| Server name | The name of the server. |
| Unit | This is always set to 0. |
| Class | The class name. |
| Mailbox | The number of the mailbox. This is a hexadecimal number. |
| Mailbox Information | |
| Mailbox name | The name of the mailbox. |
| Unit | This is always set to 0. |
| Mailbox | The number of the mailbox. This is a hexadecimal number. |
| Messages | <i>For internal use only.</i> |
| Connection Information | |
| Conn ID | <i>For internal use only.</i> |
| Unit | This is always set to 0. |
| Creator MB | <i>For internal use only.</i> |
| Module Information | |
| Module name | The name of the software module. |
| CLS | <i>For internal use only.</i> |
| Status | Status of the module. One of the following: up, down, starting, going down, exiting, or gone. |
| PID | <i>For internal use only.</i> |
| UID | Username used to log in to Cisco Unified MeetingPlace Express from a workstation (not from a phone). |
| Exit | <i>For internal use only.</i> |
| Unit Information | |
| Unit | <i>For internal use only.</i> |
| Site | <i>For internal use only.</i> |

| | |
|------------------------|-------------------------------|
| Status | <i>For internal use only.</i> |
| Run level | <i>For internal use only.</i> |
| Unit kind | <i>For internal use only.</i> |
| Last attach | <i>For internal use only.</i> |
| CPU Information | |
| CPU usage | <i>For internal use only.</i> |

Related Topics

- [Viewing the Current Status of the System](#)