

**Main page:** [Cisco Unified MeetingPlace Express, Release 2.x](#)

**Previous page:** [Page References](#)

Field	Description	Values
Severity level	The type of log messages you want to see.  For normal operations, select <b>minor</b> , which provides a list of all log entries, or <b>information</b> , which lists everything.	information/warn/major/minor  Default: major
Sort by date	Whether to sort the log messages by oldest or newest.	Sort by date ascending/ Sort by date descending  Default: Sort by date descending
Start date	The start date for the log messages you want to see.	<ul style="list-style-type: none"> <li>• Date in the format MM/DD/YYYY</li> <li>• Click ... to choose a date.</li> </ul> Default: yesterday's date
End date	The end date for the log messages you want to see.	<ul style="list-style-type: none"> <li>• Date in the format MM/DD/YYYY</li> <li>• Click ... to choose a date.</li> </ul> Default: today's date
Module	The number of the software module whose log messages you want to see.	Any valid module number  Default: 0
Unit	This is always set to 0.	0
Rows per page	The number of rows to display on each page when the results are displayed.	20 / 40 / 100 / All entries  Default: 20