

**Main page:** [Cisco Unified MeetingPlace Express, Release 2.x](#)

If your system is configured for Segmented Meeting Access (SMA), follow these steps to upgrade your system:

1. (If SSL is enabled on the system) Back up the SSL configuration for the system. See [Backing Up and Restoring the SSL Configuration](#).
2. (If SSL is enabled on the system) Disable SSL on the system. See [Disabling SSL](#).
3. Disable SMA on the primary server. See [Enabling and Disabling SMA](#).
4. Upgrade the primary server. See [Performing the Upgrade](#).

**NOTE:** When you upgrade your system to Cisco Unified MeetingPlace Express Release 2.x, the upgraded system automatically becomes the primary server.

5. Upgrade the secondary server. See [Performing the Upgrade](#).
6. Reenable SMA. See [Enabling and Disabling SMA](#)