

Use the system status to check the condition of the Cisco Unified MeetingPlace Express system. The system status shows the following information:

- System status details, such as mode, temperature, and power supply
- Each server name
- Each mailbox name and the number of messages that are in each mailbox
- Each module name and its status
- The CPU usage statistics

**Note:** If you want to view the status of the Cisco Unified MeetingPlace Express system during a particular time period, see the [Viewing the System Information Capture \(Infocap\) Log](#).

### Procedure

1. Log in to Cisco Unified MeetingPlace Express and click **Administration**.
2. Click **Services > System Status**.
3. Click **Execute**.
4. To export the data, click **Export to File**.

### Related Topics

- [Field Reference: System Status Details Page](#)