

[Cisco Unified MeetingPlace Release 6.1](#) > [Cisco Unified MeetingPlace Audio Server](#) > [Configuring](#) > [Troubleshooting the System Configuration](#)

If you have a problem with your Cisco Unified MeetingPlace system, try the following troubleshooting tips first:

- Make sure all cards and transition modules are seated properly.
- Check all cables and connections.
- Verify the card configuration with the **blade** command.
- Verify the port configuration with the **port** command.
- Check the error log with the **errorlog** command.