

Cisco Unified MeetingPlace Release 6.1 > Cisco Unified MeetingPlace Phone View

The information and procedures below provide information on using Cisco Unified MeetingPlace Phone View (formerly known as Cisco Unified MeetingPlace for Cisco Unified IP Phone) with Cisco Unified MeetingPlace Web Conferencing.

See the following sections:

- [Prerequisites for Configuring Cisco Unified MeetingPlace Phone View](#)
- [About Configuring Cisco Unified MeetingPlace Phone View](#)
- [How to Configure the Cisco Unified MeetingPlace Service in Cisco Unified Communications Manager](#)

**Note:** These pages do not provide information about installing and configuring Cisco Unified Communications Manager (formerly known as Cisco Unified CallManager) for your network. For more information, see the Cisco Unified Communications Manager documentation at [http://www.cisco.com/en/US/products/sw/voicesw/ps556/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/sw/voicesw/ps556/tsd_products_support_series_home.html).