

[Cisco Unified MeetingPlace Release 6.1](#) > [Cisco Unified MeetingPlace Audio Server](#) > [Maintaining](#) > [Running Reports](#) > [About Raw Data Reports](#) > [Raw Data Export Specifications](#)

Table: Raw Participant Join Leave Information describes raw participant join leave information report data.

**Table: Table C-11 Raw Participant Join Leave Information**

Field Name	Description	Type of Value, and Size
PartID	Meeting participant ID number	ASCII text-0 to 17
ConfNum	Unique conference number assigned to records for meetings that were successfully scheduled	An unsigned integer
gmStartDate	Date the user entered the meeting	MM/DD/YYYY
gmStartTime	Time the user entered the meeting	HH:MM:SS
gmEndDate	Date the user left the meeting	MM/DD/YYYY
gmEndTime	Time the user left the meeting	HH:MM:SS
Device	Device and port number used to join the meeting	0-1151 (voice port); 4080 (MeetingTime); 4081 (Cisco Unified MeetingPlace Web); 4082 (Cisco Unified MeetingPlace Web Conferencing Option (to enable data conferencing)); 4084 (Cisco Unified MeetingPlace Video); 4086 (Cisco Unified MeetingPlace Web meeting room)
nIncDigits	Number of DNIS digits received from the PBX	An unsigned integer
IncDigits	String of DNIS digits received from the PBX	Numerical string of up to 24 digits
AttachmentID	Which meeting recording the participant listened to	" " (When this field is empty, record represents time spent in the meeting. Any other value means the record represents time spent in MeetingNotes)  "Meeting Recording"  "Voice Agenda"

Cisco\_Unified\_MeetingPlace\_Release\_6.1\_--\_Raw\_Participant\_Join\_Leave\_Information

		"Meeting Comment ID:XX" (XX represents actual ID number of comment)
nANIDigits	Number of ANI digits received from the PBX	An unsigned integer
ANIDigits	String of ANI digits received from the PBX	Numerical string of up to 24 digits