

**Main page:** [Cisco Unified MeetingPlace, Release 8.0](#)

**Up one level:** [Configuration](#)

This module describes how to change passwords for the Cisco Unified MeetingPlace administrator:

- [Changing the Passwords for the admin Profile](#)
- [Changing the Password for root or mpxadmin on the Application Server](#)
- [Changing the Password for root or wbxadmin on the Cisco WebEx Node for MCS](#)

**Note:** For information about other administrator passwords, see these documents:

- For all hardware Media Server passwords, including passwords for the Audio Blade, video blade, Media Server Administration, and MSA, see these documents:
  - ◆ For the Audio Blade password, see [Changing the Password for the Audio Blade](#) in the [Setting Initial Values for the Hardware Media Server](#) module.
  - ◆ For the Video Blade password, see [Changing the Configuration Software User Name and Password for the Video Blade](#) in the [Setting Initial Values for the Hardware Media Server](#) module.
  - ◆ For the Media Server Administration, see [Changing the Media Server Administration Password for the Hardware Media Server](#) in the [Changing Values for the Hardware Media Server](#) module.
  - ◆ For the MSA, see [Adding and Editing Administrators for the Hardware Media Server](#) in the [Configuring the Audio and Video Blades for the Hardware Media Server](#) module.
- For Web Server passwords, see these documents:
  - ◆ For the Windows Media Server password, see [Installing Windows Media Server for Cisco Unified MeetingPlace](#) in the [Configuring the Conversion of Recording Files](#) module.
  - ◆ For the SQL password, see [How to Change and Apply a New SQL Password to the Cisco Unified MeetingPlace Web Server Software](#) in the [Configuring the SQL Server for the Cisco Unified MeetingPlace Web Server](#) module.
  - ◆ For the Web Server remote storage directory password, see [Configuring the Cisco Unified MeetingPlace Web Server for Optimal Data Storage](#) module.

## Contents

- [1 Changing the Passwords for the admin Profile](#)
  - ◆ [1.1 Procedure](#)
  - ◆ [1.2 Related Topics](#)
- [2 Changing the Password for root or mpxadmin on the Application Server](#)
  - ◆ [2.1 Procedure](#)
  - ◆ [2.2 Related Topics](#)
- [3 Changing the Password for root or wbxadmin on the Cisco WebEx Node for MCS](#)
  - ◆ [3.1 Procedure](#)
  - ◆ [3.2 Related Topics](#)

## Changing the Passwords for the admin Profile

**Note:** We recommend that you change the passwords for the preconfigured admin profile to prevent unauthorized access to your system.

The default Profile PIN for the admin profile is **24726**, which is used for authentication from a touch-tone phone.

### Procedure

1. Sign in to the Administration Center.
2. Select **User Configuration > User Profiles**.
3. Enter **admin** in the search field.
4. Select **Search**.
5. Select **Edit** in the same row as the admin profile.
6. Configure the following fields:
  - ◆ User password
  - ◆ User password confirm
  - ◆ Profile PIN
  - ◆ Profile PIN confirm
7. Select **Save**.

### Related Topics

- [Recovering the User Password for the Preconfigured Admin Profile](#) in the [Password Recovery for the Cisco Unified MeetingPlace Application Server](#) module
- [Admin Profile](#) in the [Configuring User Profiles and User Groups for Cisco Unified MeetingPlace](#) module

## Changing the Password for root or mpadmin on the Application Server

Use this procedure to recover or to change the [root](#) or [mpadmin](#) CLI user level password on the Application Server. These passwords are initially set during installation.

### Procedure

1. Sign in to the Cisco Unified MeetingPlace operating system as the root user.
2. At the password prompt, enter the root password.

The Cisco Unified MeetingPlace operating system desktop appears.
3. Right-click the desktop.
4. Select **New Terminal**.

This brings up a terminal session.
5. At the prompt, enter **/root/.security/unimmunize.sh**.
6. At the prompt, enter one of these commands:

- ◆ **passwd root**
  - ◆ **passwd mpxadmin**
7. At the New password prompt, enter a new password.  
**Note:** You might see a message that the password you entered is bad. Ignore this message.
  8. At the Retype new password prompt, re-enter the same password.
  9. At the prompt, enter **/root/.security/immunize.sh**.
  10. On the desktop, select the Red Hat icon.
  11. Select **Log Out**.
  12. Select **OK**.

#### Related Topics

- [Password Recovery for the Cisco Unified MeetingPlace Application Server module](#)

## Changing the Password for root or wbxadmin on the Cisco WebEx Node for MCS

Use this procedure to change the [root](#) or [wbxadmin](#) CLI user level password on the Cisco WebEx Node for MCS. These passwords are initially set during installation.

#### Procedure

1. Sign in to the Cisco WebEx Node CLI.
2. Enter one of the following commands, depending on which password you are changing:
  - ◆ **set password root**
  - ◆ **set password wbxadmin**
3. Enter the root password.  
This step is required because [set password](#) is a privileged command.
4. Enter the new password when prompted.
5. Enter **exit**.

#### Related Topics

- [Using the Command-Line Interface \(CLI\) on the Cisco WebEx Node for MCS module](#)
- [Password Recovery for the Cisco Unified MeetingPlace Application Server module](#)