

**Main page:** [Cisco Unified MeetingPlace, Release 8.0](#)

**Up one level:** [Planning Your Deployment](#)

- [About the Cisco Unified MeetingPlace Release 8.0 Servers](#)
- [Locations for the Hardware](#)
- [Additional Information](#)

## Contents

- [1 About the Cisco Unified MeetingPlace Release 8.0 Servers](#)
  - ◆ [1.1 Application Server](#)
  - ◆ [1.2 Web Server](#)
  - ◆ [1.3 Cisco WebEx Node for MCS](#)
  - ◆ [1.4 Media Server](#)
    - ◇ [1.4.1 Related Topics](#)
    - ◇ [1.4.2 Express Media Server](#)
    - ◇ [1.4.3 Hardware Media Server](#)
      - [1.4.3.1 Related Topics](#)
  - ◆ [1.5 Integration Servers](#)
- [2 Locations for the Hardware](#)
- [3 Additional Information](#)

## About the Cisco Unified MeetingPlace Release 8.0 Servers

- [Application Server](#)
- [Web Server](#)
- [Cisco WebEx Node for MCS](#)
- [Media Server](#)
- [Integration Servers](#)

### Application Server

Each Cisco Unified MeetingPlace Release 8.0 system must have an Application Server. The Application Server controls the audio for the Cisco Unified MeetingPlace system. The Application Server automatically includes an Express Media Server.

The Application Server is installed on a Cisco MCS with a Cisco-based Linux operating system.

### Web Server

For Cisco Unified MeetingPlace Release 8.0, the web server is optional. You only need a web server if you

are using a web deployment that uses scheduling from Cisco Unified MeetingPlace. See [Choosing a Web Deployment for Cisco Unified MeetingPlace Release 8.0](#) for a description of the web deployments.

Each Cisco Unified MeetingPlace Release 8.0 system can have a maximum of one internal web server and one web server in the DMZ.

The web server is installed on a Cisco MCS with a Cisco-based Windows operating system.

## **Cisco WebEx Node for MCS**

The Cisco WebEx Node for MCS hosts the Cisco WebEx meeting room on-premise and is responsible for connecting to the Cisco WebEx site (via an SSL gateway), hosting the meeting room, accepting client connections, outdialing, and recording the meeting.

The Cisco WebEx Node for MCS is installed on a Cisco MCS with a Cisco-based Linux operating system.

## **Media Server**

All systems that will use audio or video need a media server and the media server can be either an Express Media Server or a Hardware Media Server.

The Express Media Server and the Hardware Media Server cannot be used together in the same system; however, you can easily switch from one to the other. You can also deploy a separate Cisco Unified MeetingPlace Release 8.0 system with an Application Server and an Express Media Server for ad-hoc use only.

### **Related Topics**

[Choosing Between the Hardware Media Server and the Express Media Server in Choosing an Audio and Video Deployment for Cisco Unified MeetingPlace Release 8.0](#)

### **Express Media Server**

The Express Media Server resides on the Application Server.

### **Hardware Media Server**

The Hardware Media Server is comprised of Audio and Video Blades. If you want to use a Hardware Media Server, you must purchase, install, and configure it first.

### **Web Server**

The Cisco Unified MeetingPlace Release 8.0 system can accommodate a maximum of eight Cisco 3500 Series Media Servers. The Media Server is comprised of at least one Audio Blade and optional Video Blades. The Audio Blades in the Cisco 3500 Series Media Server control the voice conferencing and the Video Blades in the Cisco 3500 Series Media Server control the video conferencing.

There are two types of Cisco 3500 Series Media Server:

- Cisco Unified MeetingPlace 3515 Media Server. Delivered with one Audio Blade for a maximum of 250 ports and one video blade for either 24 or 48 video ports, based on the bandwidth selected.
- Cisco Unified MeetingPlace 3545 Media Server. Can be configured to support a wide range of audio and/or video ports. Multiple Cisco Unified MeetingPlace 3545 Media Servers can be deployed based on the total number of Audio and Video Blades deployed. Cisco Unified MeetingPlace 3545 Media Servers support four blades total per chassis.

You can mix and match Cisco Unified MeetingPlace 3515 Media Server and Cisco Unified MeetingPlace 3545 Media Servers, so for example, you could add more video to a Cisco Unified MeetingPlace 3515 Media Server-based system by adding a Cisco Unified MeetingPlace 3545 Media Server chassis plus a Cisco Unified MeetingPlace 3545 Media Server Video Blade.

If your system will use a Hardware Media Server, follow these guidelines:

- For Cisco Unified MeetingPlace Release 8.0, you can reuse *Video Blades* from other Cisco 3500 Series Media Servers. Cisco Unified MeetingPlace Release 8.0 supports all Video Blades that are Release 5.x or higher except for the Cisco 3515 MCU 12. So a Video Blade in a Cisco Unified MeetingPlace Release 5.4 or Release 6.0 system can be reused in a Release 8.0 system.
- For Cisco Unified MeetingPlace Release 8.0, you can reuse *Audio Blades* from Cisco Unified MeetingPlace Release 7.0 but not from earlier releases.
- You can attach a maximum of four Video Blades to an Audio Blade. For a balanced system, associate the Video Blades evenly among the Audio Blades.
- In an unbalanced system, some Audio Blades do not have Video Blades associated with them. In this scenario, the Audio Blade cannot participate in a video-enabled meeting - even if the meeting has no video callers. In an unbalanced system with many video-enabled meetings, the Audio Blades associated with Video Blades carry a disproportionate fraction of the system load. When those blades fill up, participants are unable to enter a meeting even if other voice ports are unused.

### Related Topics

For more information about the Cisco 3500 Series Media Server, see the following:

[http://www.cisco.com/en/US/products/hw/video/ps1870/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/hw/video/ps1870/tsd_products_support_series_home.html)

## Integration Servers

The Cisco Unified MeetingPlace Release 8.0 system may also have optional integrations. For information about these integrations and the servers on which they reside, see [Recommendations for Selecting the Integrations and Associated Hardware for Your System](#).

## Locations for the Hardware

The Application Server and the Hardware Media Server must be collocated. The web servers and Cisco WebEx Node for MCS may be located away from the Application Server and the Hardware Media Server; however, you must ensure that there is continuous WAN connectivity.

If your system employs a redundant Application Server, the standby Application Server may be located remotely but because they share a common IP address and hostname, the same VLAN must span to both data centers. This is applicable for systems with both Express Media Servers and Hardware Media Servers.

The Application Server and the Hardware Media Server must have no latency and must be on the same LAN segment. Latency impacts the voice quality and the user experience.

## Additional Information

For information about	See
System requirements for each component	<i>System Requirements for Cisco Unified MeetingPlace Release 8.0</i> at <a href="http://docwiki.cisco.com/wiki/Cisco_Unified_MeetingPlace_Release_8.0_--_System_Requirements_for_C">http://docwiki.cisco.com/wiki/Cisco Unified MeetingPlace Release 8.0 -- System Requirements for C</a>
Installing the components	<i>Installation and Upgrade Guide for Cisco Unified MeetingPlace Release 8.0</i> at <a href="http://www.cisco.com/en/US/products/sw/ps5664/ps5669/prod_installation_guides_list.html">http://www.cisco.com/en/US/products/sw/ps5664/ps5669/prod_installation_guides_list.html</a>
Configuring the components	Online help in the administrator interface or the <i>Configuration Guide for Cisco Unified MeetingPlace Release 8.0</i> at <a href="http://www.cisco.com/en/US/products/sw/ps5664/ps5669/products_installation_and_configuration_guides">http://www.cisco.com/en/US/products/sw/ps5664/ps5669/products_installation_and_configuration_guides</a>
The Cisco MCS	<a href="http://www.cisco.com/en/US/products/hw/voiceapp/ps378/tsd_products_support_series_home.html">http://www.cisco.com/en/US/products/hw/voiceapp/ps378/tsd_products_support_series_home.html</a>