

**Main page:** [Cisco Unified Presence, Release 7.x](#)

## Contents

- [1 Previous Topic](#)
- [2 Cisco Unified Presence Administration:](#)
- [3 Cisco Unified Presence Deployment:](#)
- [4 Cisco Unified Presence Compatibility Matrices and Port List:](#)
- [5 Cisco Unified Presence Release Notes:](#)
- [6 Cisco Unified Presence Third Party Integration Documentation:](#)
- [7 Cisco Unified Presence Solution Reference Network Design \(SRND\) Document:](#)
- [8 Cisco Unified Communications Manager Documentation:](#)
- [9 Cisco Unified Personal Communicator Documentation:](#)

### Previous Topic

- [Preparing to Install Cisco Unified Presence](#)

We strongly recommend that you read this entire document to familiarize yourself with the installation process and prerequisites. See the following Cisco Unified Presence guides for more information.

### Cisco Unified Presence Administration:

- *Configuration and Maintenance Guide for Cisco Unified Presence*

Provides step-by-step instructions for configuring, maintaining, and administering Cisco Unified Presence.

- *Cisco Unified Operating System Maintenance Guide for Cisco Unified Presence*

Provides information about software upgrades, and information about the utilities that are available via the operating system and the command line interface.

- *Serviceability Configuration and Maintenance Guide for Cisco Unified Presence*

Provides descriptions of Cisco Unified Presence serviceability, as well as step-by-step instructions for configuring alarms, traces, and other reporting.

- *Disaster Recovery System Administration Guide*

Describes how to configure the backup settings, how to back up Cisco Unified Presence data, and how to restore the data.

- *Changing the IP Address and Hostname for Cisco Unified Presence*

Provides the steps to change the IP address or host name on a Cisco Unified Presence server.

[http://www.cisco.com/en/US/products/ps6837/prod\\_maintenance\\_guides\\_list.html](http://www.cisco.com/en/US/products/ps6837/prod_maintenance_guides_list.html)

**Cisco Unified Presence Deployment:**

- *Deployment Guide for Cisco Unified Presence*

Provides an overview of the configuration process for Cisco Unified Presence and Cisco Unified Communications Manager, as well as information about integrating Cisco Unified Presence with Microsoft Live Communications Server, Microsoft Active Directory, and Microsoft Office Communicator. Also contains specific strategies for a multi-node deployment and Cisco recommendations for high availability.

[http://www.cisco.com/en/US/products/ps6837/products\\_installation\\_and\\_configuration\\_guides\\_list.html](http://www.cisco.com/en/US/products/ps6837/products_installation_and_configuration_guides_list.html)

**Cisco Unified Presence Compatibility Matrices and Port List:**

- *Hardware and Software Compatibility Information for Cisco Unified Presence*

Indicates compatible hardware servers and software with your current version of Cisco Unified Presence

- *Port Usage Information for Cisco Unified Presence*

Provides a list of the TCP and UDP ports that Cisco Unified Presence Release uses for intracluster connections and for communications with external applications or devices.

[http://www.cisco.com/en/US/products/ps6837/products\\_device\\_support\\_tables\\_list.html](http://www.cisco.com/en/US/products/ps6837/products_device_support_tables_list.html)

**Cisco Unified Presence Release Notes:**

[http://www.cisco.com/en/US/products/ps6837/prod\\_release\\_notes\\_list.html](http://www.cisco.com/en/US/products/ps6837/prod_release_notes_list.html)

**Cisco Unified Presence Third Party Integration Documentation:**

[http://www.cisco.com/en/US/products/ps6837/products\\_installation\\_and\\_configuration\\_guides\\_list.html](http://www.cisco.com/en/US/products/ps6837/products_installation_and_configuration_guides_list.html)

**Cisco Unified Presence Solution Reference Network Design (SRND) Document:**

[http://www.cisco.com/en/US/docs/voice\\_ip\\_comm/cucm/srnd/7x/uc7\\_0.html](http://www.cisco.com/en/US/docs/voice_ip_comm/cucm/srnd/7x/uc7_0.html)

**Cisco Unified Communications Manager Documentation:**

[http://www.cisco.com/en/US/products/sw/voicesw/ps556/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/sw/voicesw/ps556/tsd_products_support_series_home.html)

**Cisco Unified Personal Communicator Documentation:**

[http://www.cisco.com/en/US/products/ps6844/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps6844/tsd_products_support_series_home.html)