

Main page: [Cisco Unified Presence, Release 7.x](#)

Previous Topic

- [Overview of This Integration](#)

Module	This Module Describes...	Notes
Configuring the Licensing for this Integration	<ul style="list-style-type: none"> • Licensing requirements for Cisco Unified Presence and Cisco Unified Personal Communicator. • Instructions on how to obtain and upload a license file, and how to view license information on Cisco Unified Communications Manager. 	<ul style="list-style-type: none"> • Certain licensing topics are only applicable if you are deploying the Cisco Unified Personal Communicator client.
Configuring Cisco Unified Communications Manager for Integration with Cisco Unified Presence	<ul style="list-style-type: none"> • Instructions to configure the presence parameters, and the SIP trunk, on Cisco Unified Communications Manager. 	<ul style="list-style-type: none"> • This is required configuration. • Make sure that you complete the prerequisite user and device configuration on Cisco Unified Communications Manager as described in this module.
Planning a Cisco Unified Presence Multi-node Deployment	<ul style="list-style-type: none"> • Multi-node scalability feature introduction. • Different multi-node deployment models. • DNS configuration options for a multi-node deployment. 	<ul style="list-style-type: none"> • This module is only applicable if you are configuring a multi-node deployment.
Performing a Cisco Unified Presence Multi-node Deployment	<ul style="list-style-type: none"> • A high-level overview of how to perform a multi-node installation and deployment. • Describes the high-level sequence of tasks when performing a fresh multi-node deployment, and updating an existing multi-node deployment. 	<ul style="list-style-type: none"> • This module is only applicable if you are configuring a multi-node deployment.
Configuring a Cisco Unified Presence Server for Deployment in the Network	<ul style="list-style-type: none"> • System topology configuration (multi-node) • Cluster-wide SRV address (multi-node) 	<ul style="list-style-type: none"> • Some topics in this module are only applicable to the multi-node deployment, and some are applicable to both

Previous Topic

Cisco Unified Presence, Release 7.x -- Module Overview

	<ul style="list-style-type: none"> • Uploading Cisco Unified Presence license file (single node and multi-node) • Presence gateway and service parameters (single node and multi-node) • Turning on Cisco Unified Presence services (single node and multi-node) 	<p>single node and multi-node deployments.</p> <ul style="list-style-type: none"> • You perform certain tasks in this module on the Cisco Unified Presence publisher node, and certain tasks on all nodes in the cluster.
Configuring Security between Cisco Unified Communications Manager and Cisco Unified Presence	<ul style="list-style-type: none"> • The exchange of <i>self-signed</i> certificates between Cisco Unified Communications Manager and Cisco Unified Presence. 	<ul style="list-style-type: none"> • This module is only required if you want a secure connection between these servers.
Configuring the Cisco IP PhoneMessenger Service	<ul style="list-style-type: none"> • Instructions to configure Cisco IP PhoneMessenger on Cisco Unified Communications Manager • Instructions to configure Cisco IP PhoneMessenger on Cisco Unified Presence 	<ul style="list-style-type: none"> • This module is only required if you are deploying Cisco IP PhoneMessenger
Configuring the Cisco Unified Personal Communicator	<ul style="list-style-type: none"> • Instructions to configure Cisco Unified Personal Communicator on Cisco Unified Communications Manager • Instructions to configure Cisco Unified Personal Communicator on Cisco Unified Presence • Configuring firewalls to pass Cisco Unified Personal Communicator traffic • Configuring users for point-to-point video calls and for multipoint video conferencing 	<ul style="list-style-type: none"> • This module is only required if you are deploying Cisco Unified Personal Communicator.
Additional Deployment Information for Cisco Unified Personal Communicator	<ul style="list-style-type: none"> • Instructions to configure the voicemail servers for Cisco Unified Personal Communicator • Instructions to configure the conferencing servers for Cisco Unified Personal Communicator • Instructions to configure the video conferencing resources on Cisco Unified 	<ul style="list-style-type: none"> • This module describes optional configuration if you are deploying Cisco Unified Personal Communicator

Cisco_Unified_Presence,_Release_7.x_--_Module_Overview

	<p>Communications Manager</p> <ul style="list-style-type: none"> • Updating user configuration after deploying Cisco Unified Personal Communicator 	
Deploying and Updating Cisco Unified Personal Communicator	<ul style="list-style-type: none"> • Instructions on deploying and upgrading Cisco Unified Personal Communicator • Information on installation and use of headsets and other audio devices. 	<ul style="list-style-type: none"> • This module is only required if you are deploying Cisco Unified Personal Communicator.
Integrating the LDAP Directory	<ul style="list-style-type: none"> • Integrating the LDAP directory with Cisco Unified Communications Manager • Integrating the LDAP directory with Cisco Unified Personal Communicator 	<ul style="list-style-type: none"> • This is recommended configuration.
Configuring a Cisco Unified Presence Intercluster Deployment	<ul style="list-style-type: none"> • Information about intercluster deployments, and how to configure intercluster peers. 	<ul style="list-style-type: none"> • This module is only required if you are configuring a multi-cluster deployment.

Related Topics

- [About the Interfaces with Cisco Unified Communications Manager](#)
- [Cisco and Third-Party Integrations](#)
- [Getting More Information](#)