

**Main page:** [Cisco Unity Express -- REST PI Service Operations](#)

**Previous page:** [Cisco Unity Express -- Scripts REST PI Service Operation](#)

**Next page:** [Cisco Unity Express -- Subsystem JTAPI REST PI Service Operation](#)

**Search the Cisco Unity Express documentation on the DocWiki:**

Loading

---


## Contents

- [1 Fax Settings](#)
  - ◆ [1.1](#)
    - [Classes](#)
      - ◇ [1.1.1](#)
        - [FaxPrintNumber](#)
      - ◇ [1.1.2](#)
        - [FaxSettings](#)
    - ◆ [1.2](#)
      - [Resources](#)

## Fax Settings

### Classes

**Figure 13: Fax Settings**

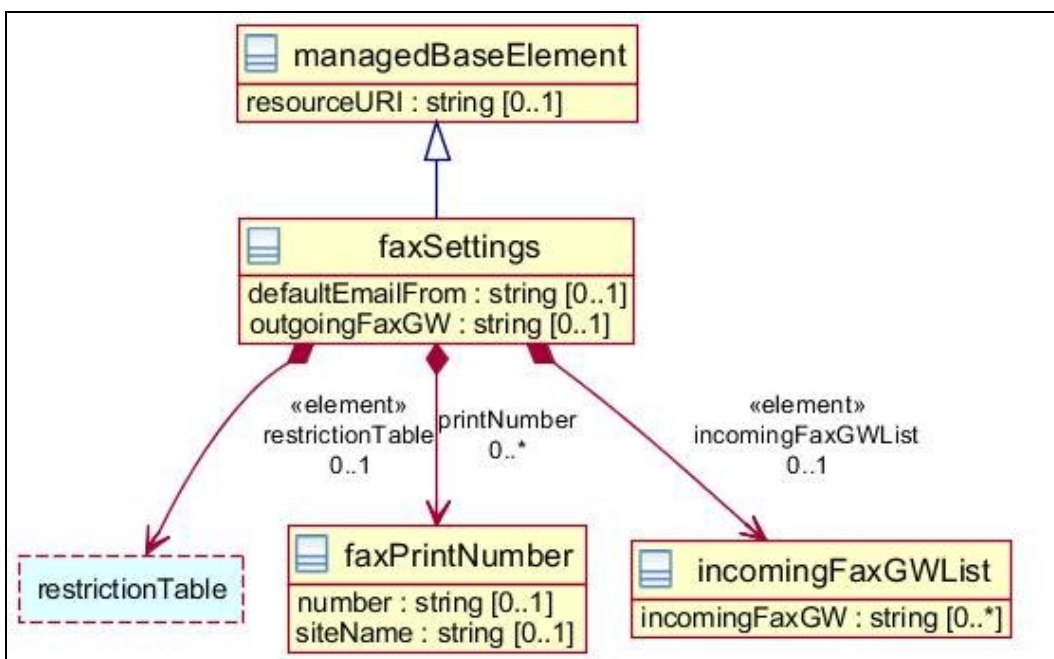

**FaxPrintNumber**

<b>Class Name</b>	Script		
<b>Extends From</b>	ManagedBaseElement		
<b>Description</b>	Class representing a system-level fax number to use for printing faxes.		
<b>XML Namespace</b>	http://fax.settings.model.rest.aesop.cisco.com		
<b>Field Name</b>	<b>Type</b>	<b>Constraints</b>	<b>Comments</b>
number	String		E.164 fax number
siteName	String	String "local" is used as the local site name.	Name of the remote site for which to configure the system-level fax number.

**FaxSettings**

<b>Class Name</b>	FaxSettings		
<b>Extends From</b>	ManagedBaseElement		
<b>Description</b>	System level fax configurations		
<b>XML Namespace</b>	http://fax.settings.model.rest.aesop.cisco.com		
<b>Field Name</b>	<b>Type</b>	<b>Constraints</b>	<b>Comments</b>
defaultEmailFrom	String		From "e-mail address to use as the default.
outgoingFaxGW	String		Hostname for the outgoing Cisco IOS fax gateway.
incomingFaxGWlist	IncomingFaxGWList		Hostname for the incoming Cisco IOS fax gateway.
printNumber	FaxPrintNumber (collection)		Collection of fax print numbers
restrictionTable	RestrictionTable		Fax number restriction table

**Resources**

Resource URI	Operation	Input	Return Value
/system/fax	GET (read fax settings)		FaxSettings
	PUT (update fax settings)	FaxSettings	
	DELETE (delete privilege)		