

Main page: [Cisco Unity Express -- REST PI Service Operations](#)

Previous page: [Cisco Unity Express -- Subsystem SIP REST PI Service Operation](#)

Next page: [Cisco Unity Express -- DNS Configuration REST PI Service Operation](#)

Search the Cisco Unity Express documentation on the DocWiki:

Loading


Contents

- [1 Login Banner](#)
 - ◆ [1.1 Classes](#)
 - ◇ [1.1.1 LoginBanner](#)
 - ◆ [1.2 Resources](#)

Login Banner

Classes

Figure 16: Login Banner

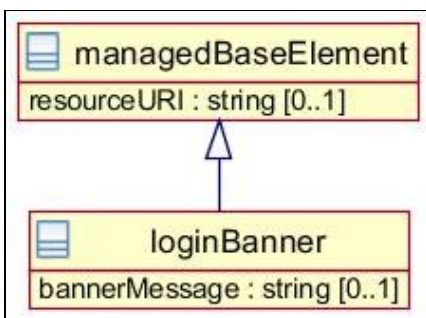

LoginBanner

Class Name	LoginBanner
Extends From	ManagedBaseElement
Description	Represents system-wide login message that is displayed to all users when they log in.
XML	http://banner.model.rest.aesop.cisco.com

Cisco_Unity_Express_--_Login_Banner_REST_API_Service_Operation

Namespace			
Field Name	Type	Constraints	Comments
bannerMessage	String	Max Length 1944	Banner message will be displayed. Following tokens in banner-content represent system settings, \$(hostname) - Displays the hostname for the system. \$(domain) - Displays the domain for the system.

Resources

Resource URI	Operation	Input	Return Value
/system/banner During the GET operation use query parameter expand to replace the variable in the login message by its value. /system/banner?expand=true	GET (read login banner settings)		LoginBanner
	PUT (update login banner)	LoginBanner	