

Main page: [Cisco Unity Express -- REST PI Service Operations](#)

Previous page: [Cisco Unity Express -- Subscriber Notification Profile REST PI Service Operation](#)

Next page: [Cisco Unity Express -- Public Distribution Lists REST PI Service Operation](#)

Search the Cisco Unity Express documentation on the DocWiki:

Loading


Contents

- [1 Notification Settings](#)
 - ◆ [1.1 Classes](#)
 - ◇ [1.1.1 VmNotificationSettings](#)
 - ◆ [1.2 Resources](#)

Notification Settings

Classes

Figure 27: System Notification Settings

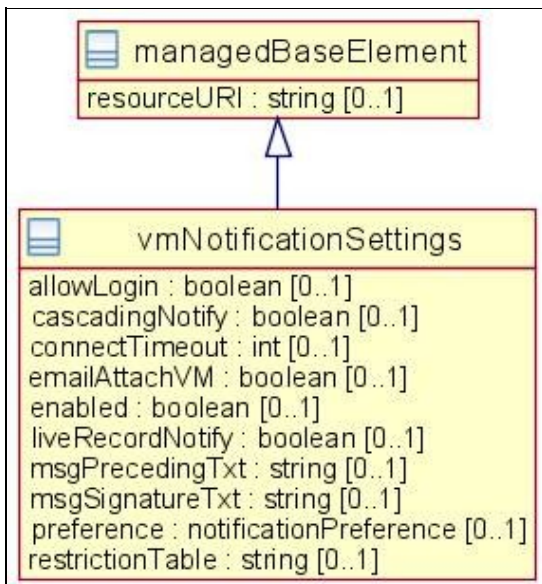

Cisco_Unity_Express_-_Notification_Settings_REST_API_Service_Operation

VmNotificationSettings

Class Name	VmNotificationSettings		
Extends From	ManagedBaseElement		
Description	System-wide settings for voicemail notification		
XML Namespace	http://notification.model.rest.voicemail.aesop.cisco.com		
Field Name	Type	Constraints	Comments
allowLogin	Boolean		Allow user to login to voicemail box to retrieve voicemail when phone notification device is notified
cascadingNotify	Boolean		Enable Cascading Notifications
connectTimeout	Integer	Range 12-96 seconds	Connection timeout duration (seconds) if phone is not answered
emailAttachVM	Boolean		Attach message to outgoing email notification
enabled	Boolean		Enable system-wide notification
liveRecordNotify	Boolean		Enable system-wide notification for live recordings
msgPrecedingTxt	String		Preceding text for voicemail message notification
msgSignatureTxt	String		Signature text for voicemail message notification
preference	Notification Preference		Type of messages for which notification is enabled
restrictionTable	String		Name of the restriction table to use while sending out notification

Resources

Resource URI	Operation	Input	Return Value
/voicemail/notification	GET (Get system-wide notification settings)		VmNotificationSettings

Cisco_Unity_Express_--_Notification_Settings_REST_Pi_Service_Operation

PUT (Set system-wide notification settings)	VmNotificationSettings
---	------------------------