

**Main page:** [Cisco Unity Express -- REST PI Service Operations](#)

**Previous page:** [Cisco Unity Express -- Notification Settings REST PI Service Operation](#)

**Next page:** [Cisco Unity Express -- Voicemail Settings REST PI Service Operation](#)

**Search the Cisco Unity Express documentation on the DocWiki:**

Loading

---


## Contents

- [1 Public Distribution Lists](#)
  - ◆ [1.1 Classes](#)
    - ◇ [1.1.1 ListElementType](#)
    - ◇ [1.1.2 ListElement](#)
    - ◇ [1.1.3 DistributionList](#)
  - ◆ [1.2 Resources](#)

### Public Distribution Lists

#### Classes

**Figure 28: Distribution List**

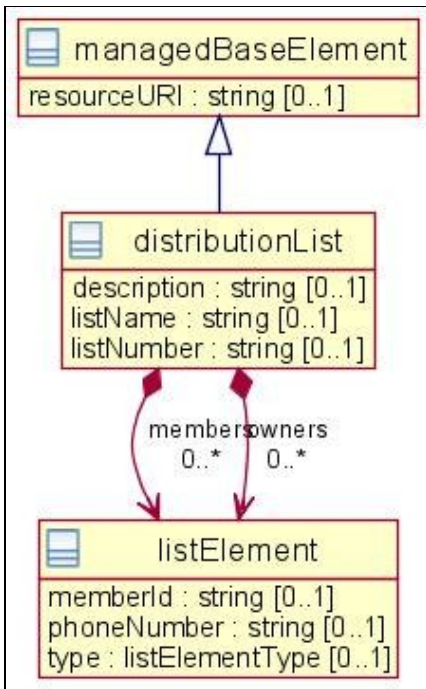

**ListElementType**

<b>Class Name</b>	ListElementType (Enumeration Class)
<b>Extends From</b>	
<b>Description</b>	Enumeration of type of elements that populate a public distribution list
<b>XML Namespace</b>	http://distributionlist.model.rest.voicemail.aesop.cisco.com
<b>Enum Values</b>	USER, GROUP, GDM, LIST, REMOTE_USER, REMOTE_BLIND, NON_SUBSCRIBER

**ListElement**

<b>Class Name</b>	ListElement		
<b>Extends From</b>	ManagedBaseElement		
<b>Description</b>	Class representing a distribution list member		
<b>XML Namespace</b>	http://distributionlist.model.rest.voicemail.aesop.cisco.com		
<b>Field Name</b>	<b>Type</b>	<b>Constraints</b>	<b>Comments</b>
memberId	String		Identifier for the list element
phoneNumber	String		Phone number of the list member
type	ListElementType		Type of the list member

**DistributionList**

<b>Class Name</b>	DistributionList		
<b>Extends From</b>	ManagedBaseElement		
<b>Description</b>	Class representing a public distribution list		
<b>XML Namespace</b>	http://distributionlist.model.rest.voicemail.aesop.cisco.com		
<b>Field Name</b>	<b>Type</b>	<b>Constraints</b>	<b>Comments</b>
description	String		List description
listName	String		Name of the public list
listNumber	String		Number of the distribution list
members	ListElement (collection)		Collection of the members of this public list
owners	ListElement (collection)		Collection of the owner of this public list

**Resources**

Resource URI	Operation	Input	Return Value
/voicemail/publiclists	GET (Read all public lists)		BaseElementList containing a collection of DistributionList objects
	POST (Create a new public distribution list)	DistributionList (Including list of member and owners )	
/voicemail/publiclists/{listname}	GET (Read a public list, including its members and owners)		DistributionList (Including list of member and owners )
	PUT (Update list information)		
	DELETE (Delete list)		
/voicemail/publiclists/{listname}/members	GET (Read members of a public list)		BaseElementList containing a collection of ListElement objects
/voicemail/publiclists/{listname}/members/add	PUT (Add a member to a	ListElement	

Cisco\_Unity\_Express\_--\_Public\_Distribution\_Lists\_REST\_API\_Service\_Operation

	public list)		
/voicemail/publiclists/{listname}/members/delete	PUT (Remove a member of public list)	ListElement	
/voicemail/publiclists/{listname}/owners	GET (Read owners of a public list)		BaseElementList containing a collection of ListElement objects
/voicemail/publiclists/{listname}/owners/add	PUT (Add an owner to list)	ListElement	
/voicemail/publiclists/{listname}/owners/delete	PUT (Remove an owner from list)	ListElement	