

**Main page:** [Cisco Unity Express -- REST PI Service Operations](#)

**Previous page:** [Cisco Unity Express -- NTP Server REST PI Service Operation](#)

**Next page:** [Cisco Unity Express -- User Defaults REST PI Service Operation](#)

**Search the Cisco Unity Express documentation on the DocWiki:**

Loading

---


## Contents

- [1 SMTP Server](#)
  - ◆ [1.1 Classes](#)
    - ◇ [1.1.1 SMTPServer](#)
  - ◆ [1.2 Resources](#)

## SMTP Server

### Classes

**Figure 21: SMTP Server**

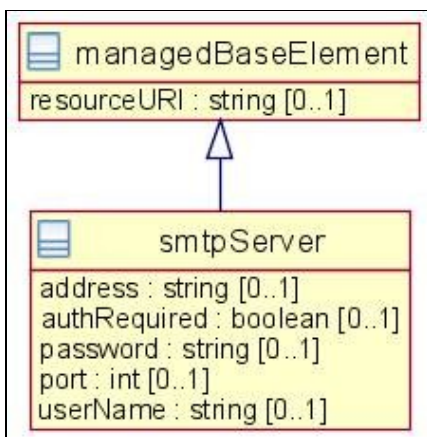

### SMTPServer

<b>Class Name</b>	SMTPServer
<b>Extends From</b>	ManagedBaseElement
<b>Description</b>	Class representing SMTP server configuration

## Cisco\_Unity\_Express\_--\_SMTP\_Server\_REST\_Pi\_Service\_Operation

<b>XML Namespace</b>	http://smtp.settings.model.rest.aesop.cisco.com		
<b>Field Name</b>	<b>Type</b>	<b>Constraints</b>	<b>Comments</b>
address	String		SMTP server address
authRequired	Boolean		Boolean indicating if authentication is required by the SMTP server
password	String		Password for SMTP server
Port	Integer		Port number for SMTP server
userName	String		User name to use with SMTP server

### Resources

Resource URI	Operation	Input	Return Value
/system/smtp/server	GET (read SMTP server settings)		SMTPServer
	PUT (update SMTP server settings)	SMTPServer	