

Main page: [Cisco Unity Express -- REST PI Service Operations](#)

Previous page: [Cisco Unity Express -- NTP Server REST PI Service Operation](#)

Next page: [Cisco Unity Express -- User Defaults REST PI Service Operation](#)

Search the Cisco Unity Express documentation on the DocWiki:

Loading


Contents

- [1 SMTP Server](#)
 - ◆ [1.1 Classes](#)
 - ◇ [1.1.1 SMTPServer](#)
 - ◆ [1.2 Resources](#)

SMTP Server

Classes

Figure 21: SMTP Server

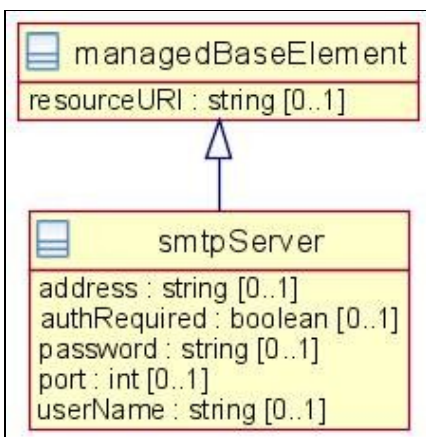

SMTPServer

Class Name	SMTPServer
Extends From	ManagedBaseElement
Description	Class representing SMTP server configuration

Cisco_Unity_Express_--_SMTP_Server_REST_Pi_Service_Operation

XML Namespace	http://smtp.settings.model.rest.aesop.cisco.com		
Field Name	Type	Constraints	Comments
address	String		SMTP server address
authRequired	Boolean		Boolean indicating if authentication is required by the SMTP server
password	String		Password for SMTP server
Port	Integer		Port number for SMTP server
userName	String		User name to use with SMTP server

Resources

Resource URI	Operation	Input	Return Value
/system/smtp/server	GET (read SMTP server settings)		SMTPServer
	PUT (update SMTP server settings)	SMTPServer	