

**Main page:** [Cisco Unity Express -- REST PI Service Operations](#)

**Previous page:** [Cisco Unity Express -- Fax Settings REST PI Service Operation](#)

**Next page:** [Cisco Unity Express -- Subsystem SIP REST PI Service Operation](#)

**Search the Cisco Unity Express documentation on the DocWiki:**

Loading

---


## Contents

- [1 Subsystem JTAPI](#)
  - ◆ [1.1 Classes](#)
    - ◇ [1.1.1 SubsystemJTAPI](#)
    - ◇ [1.1.2 RedirectCSS](#)
  - ◆ [1.2 Resources](#)

### Subsystem JTAPI

Classes

**Figure 14: Subsystem JTAPI**

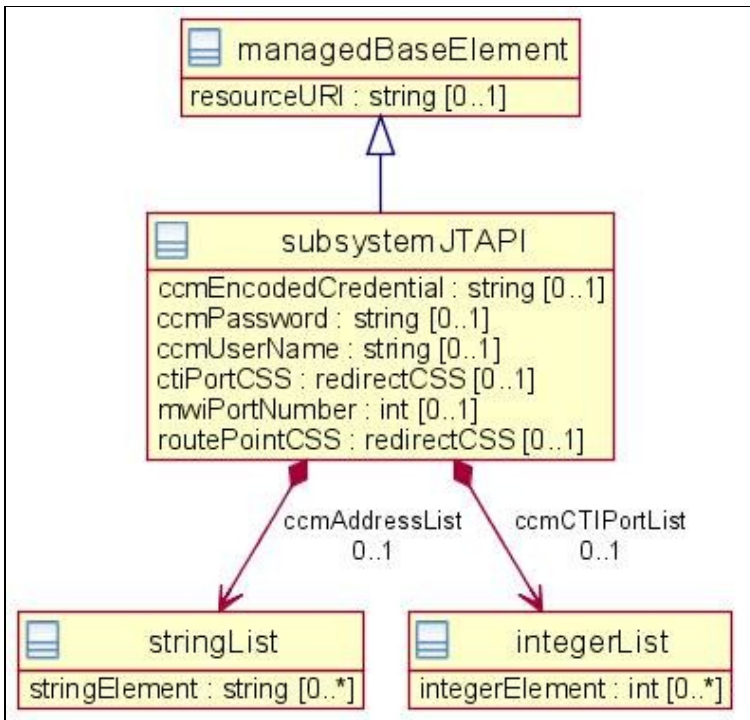

### SubsystemJTAPI

Class Name	SubsystemJTAPI		
Extends From	ManagedBaseElement		
Description	Represents system-level JTAPI related configuration.		
XML Namespace	http://jtapi.subsystem.model.rest.aesop.cisco.com		
Field Name	Type	Constraints	Comments
ccmAddressList	StringList		List of IP address or hostname of Cisco Unified Communications Manager servers.
ccmCTIPortList	IntegerList		List of Cisco Unified Communications Manager CTI ports.
ccmEncodedCredential	String	During the update operation, <b>ccmEncodedCredential</b> and plain text credentials ( <b>ccmUserName</b> , <b>ccmPassword</b> ) cannot be specified together.	Cisco Unified Communications Manager JTAPI username and password in encrypted form
ccmUserName	String	During the update operation, <b>ccmEncodedCredential</b>	CUCM JTAPI user name

Cisco\_Unity\_Express\_--\_Subsystem\_JTAPI\_REST\_Pi\_Service\_Operation

		and plain text credentials ( <b>ccmUserName</b> , <b>ccmPassword</b> ) cannot be specified together.	
ccmPassword	String	During update operation, <b>ccmEncodedCredential</b> and plain text credentials ( <b>ccmUserName</b> , <b>ccmPassword</b> ) cannot be specified together.	CUCM password for JTAPI user
mwiPortNumber	Integer		CUCM CTI port to use for MWI
ctiPortCSS	RedirectCSS		Calling search space used to redirect calls from CTI ports to elsewhere.
routePointCSS	RedirectCSS		Calling search space used to redirect calls from route points to CTI ports

**RedirectCSS**

<b>Class Name</b>	RedirectCSS ( <i>Enumeration Class</i> )
<b>Extends From</b>	BaseElement
<b>Description</b>	Enumeration for calling search space to use while redirecting calls
<b>XML Namespace</b>	http://jtapi.subsystem.model.rest.aesop.cisco.com
<b>Enum Values</b>	<b>CALLING_PARTY</b> (Use the original calling party's calling search space to redirect) <b>REDIRECTING_PARTY</b> (Use the redirecting party's calling search space to redirect) <b>CCM</b> (default calling search space)

**Resources**

Resource URI	Operation	Input	Return Value
/ subsystem/jtapi	GET		SubsystemJTAPI
	PUT	SubsystemJTAPI	